



# ECCENTRIC SHAFT POSITION SENSOR

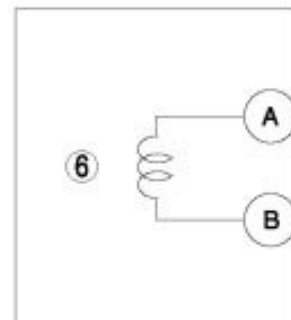

# PCM

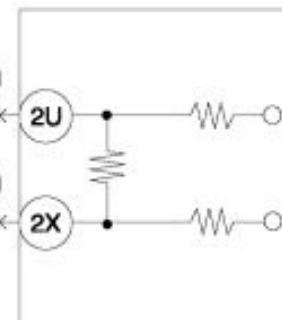

## ECCENTRIC SHAFT POSITION SENSOR WIRING HARNESS-SIDE CONNECTOR



## PCM WIRING HARNESS-SIDE CONNECTOR

2AB	2Y	2V		2P	2M	2J	2G	2D	2A
2AC	2Z	2W	2T	2Q	2N	2K	2H	2E	2B
2AD	2AA	2X	2U	2R	2O		2I	2F	2C

