


3000-250 (30-12), 3000-500 (30-13)

Organic Lining

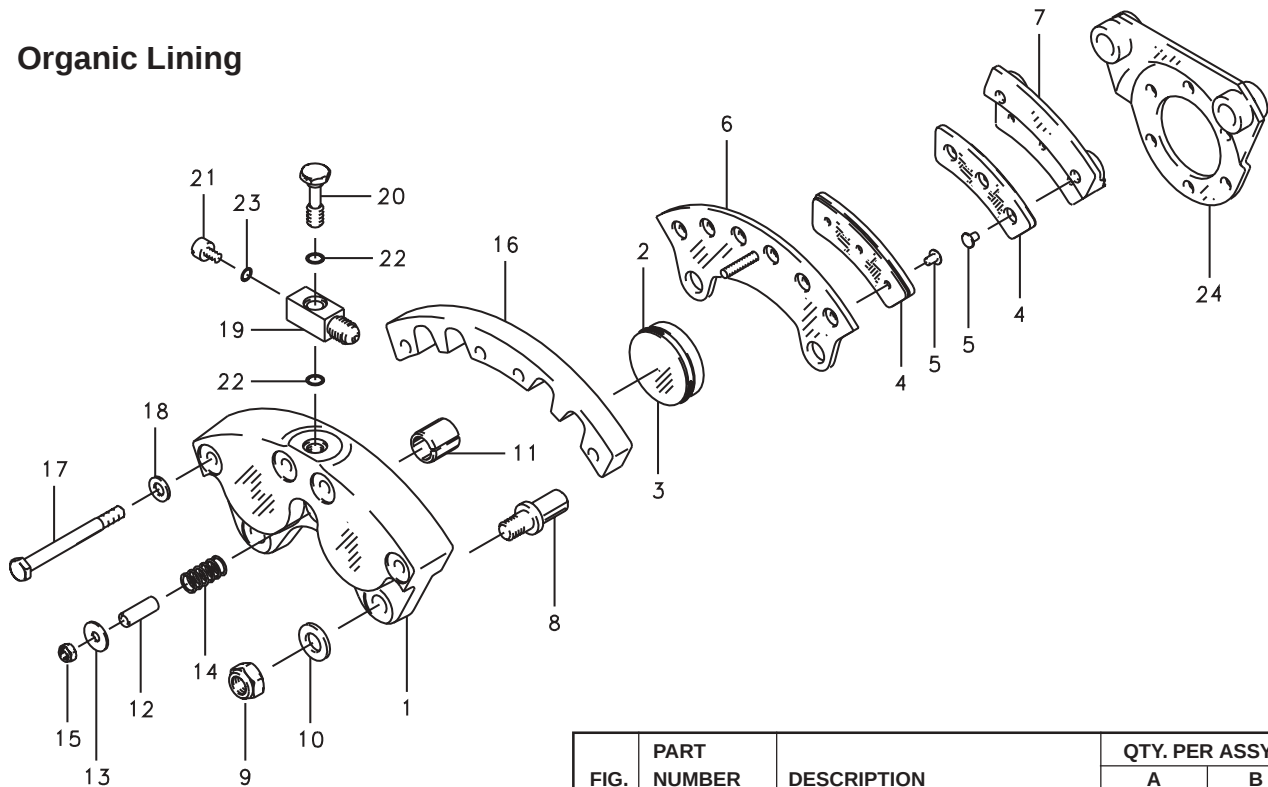

Assy. Number


A) 3000-250 (30-12)

B) 3000-500 (30-13)

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.	
			A	B
	091-00400	Cylinder Assy.	1	
	091-00500	Cylinder Assy.		1
1	061-00300	Cylinder	1	
	092-00200	Piston Assy.	2	2
2	101-02300	O-Ring (MS28775-218)	2	2
3	062-00300	Piston	2	2
	073-00200	Pressure Plate Assy.	1	1
4	066-10600	Lining	2	2
5	105-00200	Rivet	6	6
6	184-00100	Plate Assy.	1	1
	074-00200	Back Plate Assy.	2	2
7	064-00500	Back Plate	2	2
4	066-10600	Lining	2	2
5	105-00200	Rivet	6	6
8	069-00200	Anchor Bolt	2	2
9	094-10100	Nut (MS21042-6)	2	2
10	095-10100	Washer (AN960-616L)	2	2
11	071-00100	Cylinder-Retract	1	1
12	067-00400	Spacer	1	1
13	095-00200	Washer	1	1
14	082-00500	Spring	1	1
15	094-10200	Nut (NASM21083N3)	1	1
16	068-00200	Shim		1
	068-00800	Shim	1	
17	103-12100	Bolt (AN4H15A)	4	
	103-12300	Bolt (AN4H17A)		4
18	095-10200	Washer (AN960-416L)	4	4
	087-00200	Bleeder Body Assy.	1	1
19	077-00200	Body-Bleeder	1	1
20	079-00200	Screw-Bleeder	1	1
21	079-00100	Screw-Bleeder	1	1
22	101-00600	O-Ring (MS28775-011)	2	2
23	101-00300	O-Ring (MS28775-008)	1	1
24	075-00300	Torque Plate Assy.		1

30-21, 30-24, 30-35, 30-41, 30-41A, 30-41B,
30-51, 30-51A, 30-51B, 30-60, 30-60A, 30-60B

Organic Lining

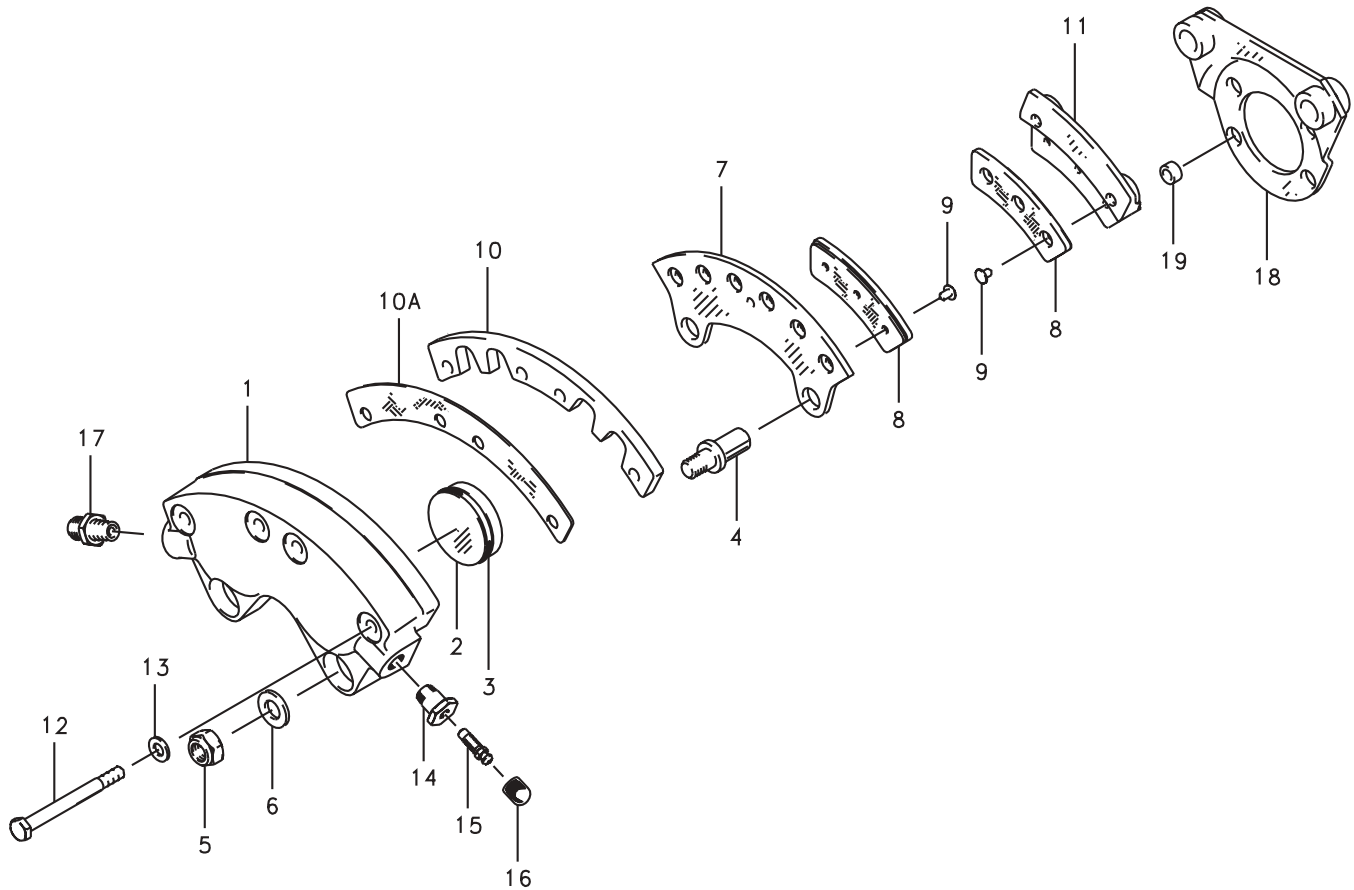

Illustrated Parts List**Brake Assembly – 6" External
Single Cylinder, Dual Piston****30-21, 30-24, 30-35, 30-41, 30-41A, 30-41B,
30-51, 30-51A, 30-51B, 30-60, 30-60A, 30-60B****Organic Lining**

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.											
			A	B	C	D	E	F	G	H	I	J	K	L
	091-08800	Cylinder Assy.						1						
	091-08901	Cylinder Assy.											1	1
	091-12100	Cylinder Assy.								1	1			
1	061-06600	Cylinder	1	1		1	1	1						
	061-06701	Cylinder											1	1
	061-07100	Cylinder								1	1			
	(5)	Cylinder				1			1			1		
	092-00200	Piston Assy.	2	2		2	2	2	2	2	2			
	092-00700	Piston Assy.			2							2	2	2
	062-00300	Piston	2	2		2	2	2	2	2	2			
2	062-00600	Piston			2							2	2	2
	101-02300	O-Ring (MS28775-218)	2	2		2	2	2	2	2	2			
3	101-02700	O-Ring (MS28775-222)			2							2	2	2
	069-00200	Anchor Bolt	2	2	2	2	2	2	2	2	2	2	2	2
4	094-10100	Nut (MS21042-6)	2	2	2	2	2	2	2	2	2	2	2	2
5	094-10100	Nut (MS21042-6)	2	2	2	2	2	2	2	2	2	2	2	2
6	095-10100	Washer (AN960-616L)	2	2	2	2	2	2	2	2	2	2	2	2
	073-00400	Pressure Plate Assy.	1	1		1	1	1	1					
	073-00900	Pressure Plate Assy.			1									
	073-04100	Pressure Plate Assy.								1	1	1	1	1
	063-00600	Pressure Plate	1	1	1	1	1	1	1	1	1	1	1	1
	066-10600	Lining	2	2	2	2	2	2	2	2	2	2	2	2
8	066-10600	Lining	2	2	2	2	2	2	2	2	2	2	2	2
9	105-00200	Rivet	6	6	6	6	6	6	6	6	6	6	6	6
10	068-01200	Shim			1									
	068-00800	Shim				1	1							
	(5)	Shim	1	1					1					
10A	068-01100	Shim-Insulating			1									
	074-00200	Back Plate Assy.	2	2	2	2	2	2	2					
	074-02700	Back Plate Assy.								2	2	2	2	2
11	064-00500	Back Plate	2	2	2	2	2	2	2	2	2	2	2	2
8	066-10600	Lining	2	2	2	2	2	2	2	2	2	2	2	2
9	105-00200	Rivet	6	6	6	6	6	6	6	6	6	6	6	6
12	103-12200	Bolt (AN4H16A)	4	4	4				4	4	4			
	103-12100	Bolt (AN4H15A)				4		4				4	4	4
	103-11500	Bolt					4							
13	095-10200	Washer (AN960-416L)	4	4	4	4	4	4	4	4	4	4	4	4
14	081-00100	Seat-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1
15	079-00300	Screw-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1
16	183-00100	Cap-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1
17	104-00300	Fitting (AN816-4D)	1			1	1	1	1	1	1			
	104-00400	Fitting (AN822-4D)		1										
	104-00500	Fitting (MS20823-4D)			1									
18	075-00500	Torque Plate Assy.												1
	075-01500	Torque Plate Assy.	1		1									
	075-02700	Torque Plate Assy.							1		1			
	075-03900	Torque Plate Assy.					1							
	075-08501	Torque Plate Assy.								1				
	075-12500	Torque Plate Assy.										1	1	
	(5)	Torque Plate Assy.		1										
	145-01000	Bushing (3)	2		2									

Assy. Number


- A) 30-21 (1)
 B) 30-24 (1)
 C) 30-35 (1)
 D) 30-41 (1) (2)
 E) 30-41A (1)
 F) 30-41B
 G) 30-51 (1) (6)
 H) 30-51A
 I) 30-51B
 J) 30-60 (1) (4)
 K) 30-60A
 L) 30-60B

NOTES:

- (1) Inactive assembly – spares support only for parts listed.
 (2) 30-41 superseded by 30-41B.
 (3) Check position of bushing for proper replacement.
 (4) 30-60 superseded by 30-60A. 30-60A superseded by 30-60B.
 (5) Inactive part – no longer available for spares support.
 (6) 30-51 superseded by 30-51B.

30-32, 30-32A, 30-32B, 30-32C, 30-32E

Organic Lining

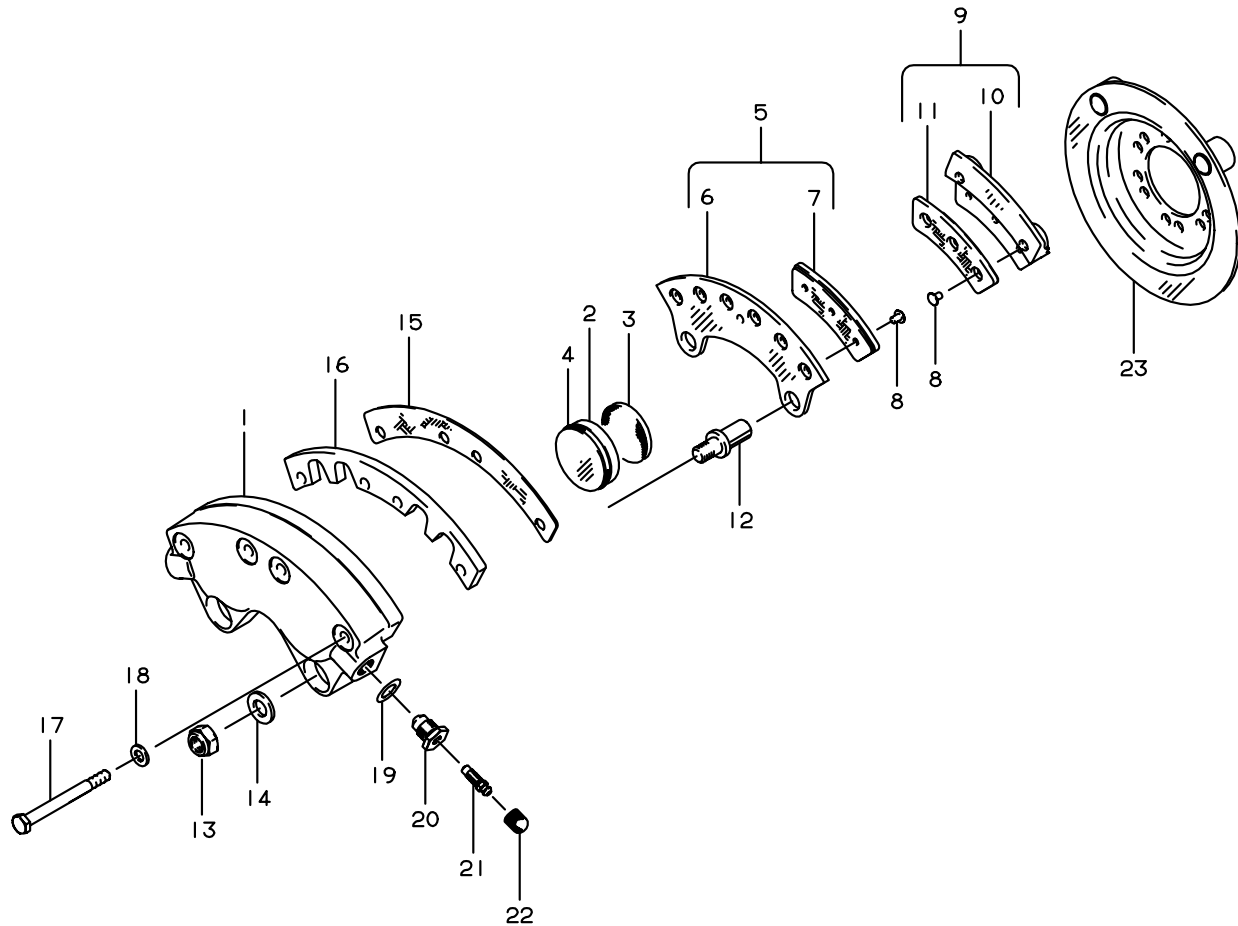

30-32, 30-32A, 30-32B, 30-32C, 30-32E

Organic Lining

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.				
			A	B	C	D	E
1	091-10200	Cylinder Assy.			1	1	
	091-19800	Cylinder Assy.					1
	061-08300	Cylinder			1	1	1
	(2)	Cylinder	1	1			
	092-00900	Piston Assy.	2	2	2	2	2
	2	062-00800	Piston	2	2	2	2
	3	088-00200	Insulator	2	2	2	2
	4	101-02300	O-Ring (MS28775-218)	2	2	2	2
	5	073-00400	Pressure Plate Assy.		1	1	1
		(2)	Pressure Plate Assy.	1			
6	063-00600	Pressure Plate	1	1	1	1	1
7	066-10600	Lining		2	2	2	2
	(2)	Lining	2				
8	105-00200	Rivet		6	6	6	6
	(2)	Pin	4				
9	074-00200	Back Plate Assy.		2	2	2	2
	(2)	Back Plate Assy.	2				
10	064-00500	Back Plate	2	2	2	2	2
11	066-10600	Lining		2	2	2	2
	(2)	Lining	2				
8	105-00200	Rivet		6	6	6	6
	(2)	Pin	4				
12	069-00200	Anchor Bolt	2	2	2	2	
	069-02600	Anchor Bolt					2
13	094-10100	Nut (MS21042-6)		2	2	2	2
14	095-10100	Washer (AN960-616L)		2	2	2	2
15	068-01100	Shim-Insulator	1	1	1	1	1
16	068-01200	Shim-Back Plate	1	1			
17	103-12000	Bolt	4	4	4	4	4
18	095-10200	Washer (AN960-416L)	4	4	4	4	4
19	101-00700	O-Ring (MS28775-012)	1	1	1	1	1
20	081-00200	Seat-Bleeder	1	1	1	1	1
21	079-00300	Screw-Bleeder	1	1	1	1	1
22	183-00100	Cap-Bleeder	1	1	1	1	1
23	075-02100	Torque Plate Assy.	1	1		1	
	075-02101	Torque Plate Assy.			1		
	075-05401	Torque Plate Assy.					1

Assy. Number

A) 30-32 (1)

B) 30-32A (1)

C) 30-32B

D) 30-32C


E) 30-32E

NOTES:

- (1) Inactive assembly – spares support only for parts listed.
- (2) Inactive part – no longer available for spares support.

30-52, 30-52A, 30-52B, 30-52D, 30-52E, 30-52F, 30-52G, 30-52H, 30-52K, 30-52L, 30-52M, 30-52N, 30-52P, 30-52Q, 30-52S, 30-52T, 30-52U, 30-52V, 30-52W, 30-52X, 30-52Y, 30-52Z, 30-52AA

Organic Lining

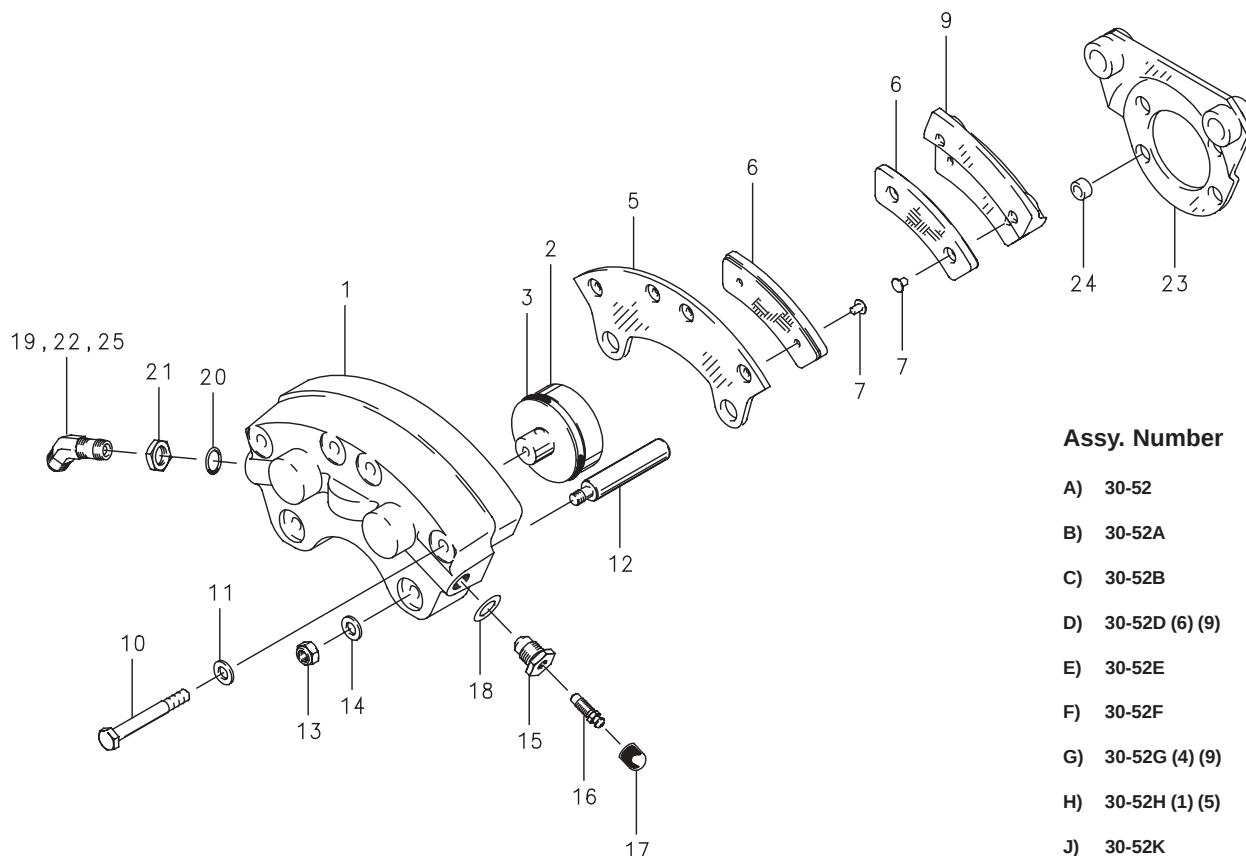

Assy. Number

- A) 30-52
- B) 30-52A
- C) 30-52B
- D) 30-52D (6) (9)
- E) 30-52E
- F) 30-52F
- G) 30-52G (4) (9)
- H) 30-52H (1) (5)
- J) 30-52K
- K) 30-52L (8)
- L) 30-52M
- M) 30-52N
- N) 30-52P
- O) 30-52Q
- P) 30-52S (2)
- Q) 30-52T
- R) 30-52U
- S) 30-52V (3) (5)
- T) 30-52W
- U) 30-52X (9)
- V) 30-52Y (7)
- W) 30-52Z (5) (11)
- X) 30-52AA (5) (12)

NOTES:

- (1) Use with 075-11700(LH) and 075-11750(RH) Torque Plates.
- (2) Use with 075-09200(LH) and 075-09300(RH) Torque Plates.
- (3) Use with 075-13800(LH) and 075-13850(RH) Torque Plates.
- (4) 30-52 supersedes 30-52G.
- (5) When reordering, specify LH or RH.
- (6) 30-52N supersedes 30-52D when reordering.
- (7) 30-52Y to be used with 40-75J corrosive resistant equipment.
- (8) Use with 075-07500(LH) and 075-07600(RH) Torque Plates – order from airframe manufacturer only.
- (9) Inactive assembly – spares support only for parts listed.
- (10) Inactive part – no longer available for spares support.
- (11) Use with 075-22800 (LH) and 075-22850 (RH) Torque Plates.
- (12) Use with 075-23100 (LH) and 075-23150 (RH) Torque Plates.

Illustrated Parts List


Brake Assembly – 6" External
Single Cylinder, Dual Piston30-52, 30-52A, 30-52B, 30-52D, 30-52E, 30-52F, 30-52G, 30-52H, 30-52K, 30-52L, 30-52M, 30-52N,
30-52P, 30-52Q, 30-52S, 30-52T, 30-52U, 30-52V, 30-52W, 30-52X, 30-52Y, 30-52Z, 30-52AA

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.																	
			A	B	C	D	E	F	G	H	J	K	L	M	N	O	P	Q	R	S
1	091-02100	Cylinder Assy.	1	1	1	1	1	1	1					1			1			
	091-02101	Cylinder Assy.								1										
	091-02103	Cylinder Assy.																		
	091-05100	Cylinder Assy.										1								1
	091-05300	Cylinder Assy.												1						
	091-05800	Cylinder Assy.													1		1			
	091-10600	Cylinder Assy.																	1	
	091-10601	Cylinder Assy.																	1	
	091-10602	Cylinder Assy.																		1
	061-01800	Cylinder	1	1	1	1	1	1	1		1		1	1			1			1
	061-01801	Cylinder								1										
	061-01802	Cylinder														1		1		
	061-01804	Cylinder																		1
	061-03600	Cylinder										1								
	061-04200	Cylinder												1						
	061-08500	Cylinder																	1	
	061-08501	Cylinder																1	1	1
2	092-01600	Piston Assy.	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
	092-07200	Piston Assy.																		2
	062-01500	Piston	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
3	062-07300	Piston																		2
	101-02700	O-Ring (MS28775-222)	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
4	073-01000	Pressure Plate Assy.	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	073-04200	Pressure Plate Assy.																	1	1
5	063-01100	Pressure Plate	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
6	066-10500	Lining	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
7	105-00200	Rivet	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
8	074-01000	Back Plate Assy.	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
	074-02900	Back Plate Assy.																2	2	2
9	064-01500	Back Plate	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
6	066-10500	Lining	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
7	105-00200	Rivet	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
10	103-11800	Bolt	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
	103-12400	Bolt (AN4H21A)										4								
11	095-10400	Washer (AN960-416)	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
	069-00400	Anchor Bolt	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
12	069-01900	Anchor Bolt																		2
	069-03100	Anchor Bolt																		2
13	094-10300	Nut (MS21044-N4)	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
14	095-10200	Washer (AN960-416L)	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
15	081-00100	Seat-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	081-00200	Seat-Bleeder										1								
	081-00500	Seat-Bleeder																		1
16	079-00300	Screw-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
17	183-00100	Cap-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
18	101-00600	O-Ring (MS28775-011)																1	1	1
19	104-00500	Fitting (MS20823-4D)		1									1				1			
20	101-00700	O-Ring (MS28775-012)										1								
21	094-90500	Nut (AN924-4D)										1								
22	104-02000	Fitting (AN837-4D)										1								
23	075-01500	Torque Plate Assy.	1						1	S							S		1	S
	075-01501	Torque Plate Assy.		1						E							E			E
	075-04400	Torque Plate Assy.			1					E							E			E
	075-05300	Torque Plate Assy.						1												
	075-05301	Torque Plate Assy.					1			N							N			1
	075-05401	Torque Plate Assy.								O				1			O	1	1	O
	075-05402	Torque Plate Assy.								T						1	T		T	T
	075-07300	Torque Plate Assy.								E		1					E		E	E
	075-08600	Torque Plate Assy.								S					1		S		S	S
	075-13600	Torque Plate Assy.									1									
(10)	Torque Plate Assy.					1														
24	145-01000	Bushing	2			2			2		2		3	2				2	2	2
25	104-11200	Fitting																		1

Cleveland
Wheels & Brakes

30-54, 30-54A, 30-54B, 30-54C, 30-58A, 30-58B,
30-61, 30-61D, 30-61E, 30-61F, 30-65, 30-65A, 30-65E

Organic Lining

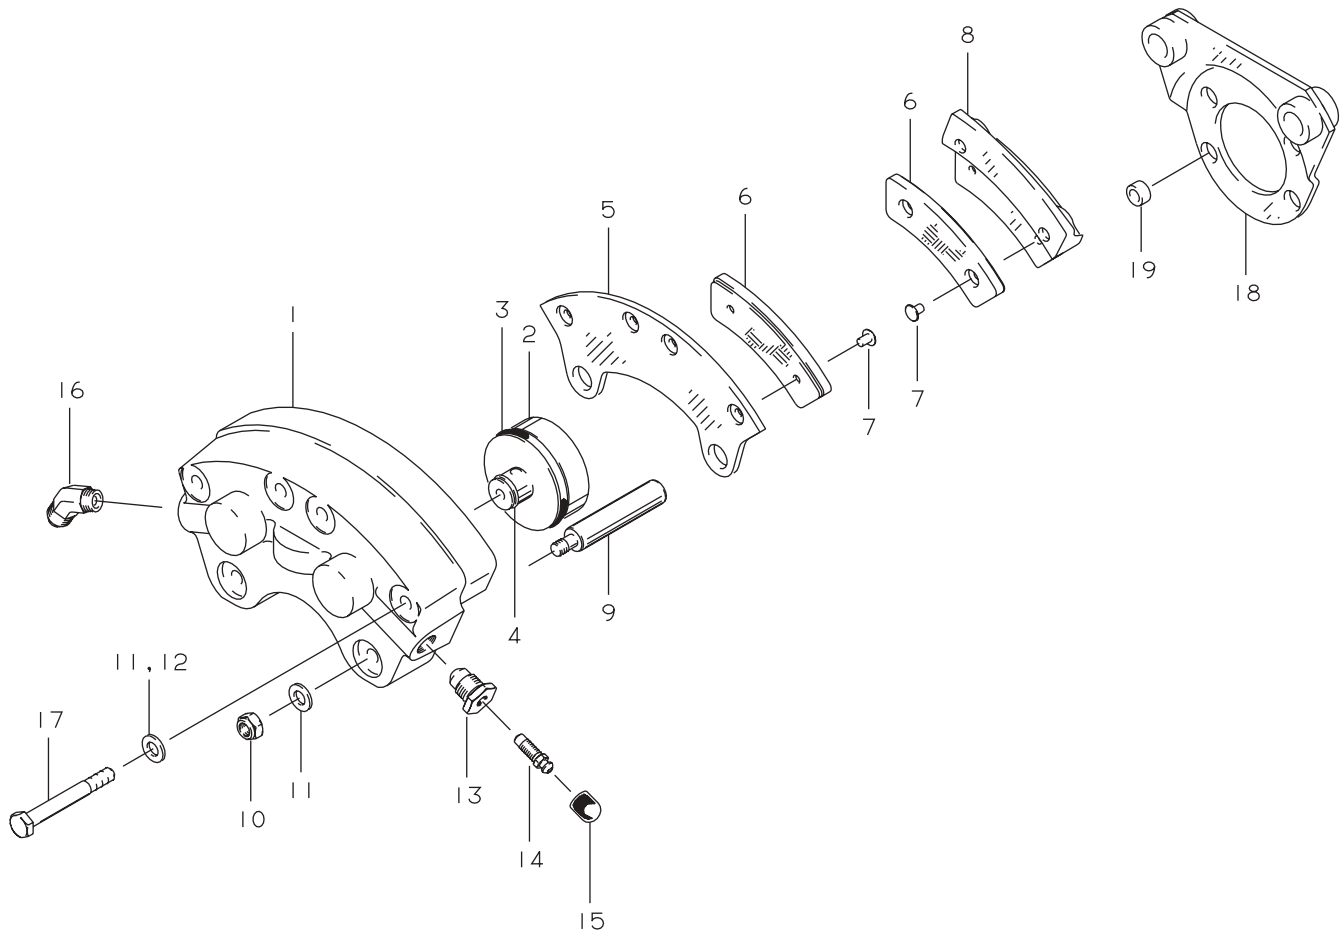

30-54, 30-54A, 30-54B, 30-54C, 30-58A, 30-58B, 30-61, 30-61D, 30-61E, 30-61F, 30-65, 30-65A, 30-65E

Organic Lining

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.												
			A	B	C	D	E	F	G	H	I	J	K	L	M
	091-02100	Cylinder Assy.											1		
	091-02400	Cylinder Assy.												1	
	091-02401	Cylinder Assy.													1
	091-02501	Cylinder Assy.	1	1											
	091-02800	Cylinder Assy.							1						
	091-03800	Cylinder Assy.								1					
	091-04100	Cylinder Assy.									1				
	091-09200	Cylinder Assy.			1										
1	091-15200	Cylinder Assy.				1									
	061-01800	Cylinder											1		
	061-01802	Cylinder												1	
	061-02400	Cylinder	1	1	1	1	1	1	1	1	1	1			1
	092-01600	Piston Assy.	2	2	2	2	2	2	2		2	2	2	2	2
	092-02100	Piston Assy.								2					
2	062-01500	Piston	2	2	2	2	2	2	2		2	2	2	2	2
	062-01900	Piston								2					
3	101-02700	O-Ring (MS28775-222)	2	2	2	2	2	2	2	2	2	2	2	2	2
4	082-02000	Spring-Friction								2					
	073-01000	Pressure Plate Assy.	1	1					1	1			1		1
	073-04200	Pressure Plate Assy.			1						1			1	
	073-06700	Pressure Plate Assy.				1									
	(2)	Pressure Plate Assy.					1	1				1			
5	063-01100	Pressure Plate	1	1	1	1	1	1	1	1	1	1	1	1	1
6	066-10500	Lining	2	2	2	2			2	2	2		2	2	2
	(2)	Lining					2	2				2			
7	105-00200	Rivet	4	4	4	4	4	4	4	4	4	4	4	4	4
	074-01000	Back Plate Assy.							2	2			2		
	074-01001	Back Plate Assy.	2	2											
	074-02900	Back Plate Assy.									2			2	2
	074-03500	Back Plate Assy.			2										
	074-05100	Back Plate Assy.				2									
	(2)	Back Plate Assy.					2	2				2			
8	064-01500	Back Plate	2	2	2	2	2	2	2	2	2	2	2	2	2
6	066-10500	Lining	2	2	2	2			2	2	2		2	2	2
	(2)	Lining					2	2				2			
7	105-00200	Rivet	4	4	4	4	4	4	4	4	4	4	4	4	4
9	069-00400	Anchor Bolt	2	2	2	2	2	2	2	2	2	2	2	2	
	069-01900	Anchor Bolt													2
10	094-10300	Nut (MS21044-N4)	2	2	2	2	2	2	2	2	2	2	2	2	2
11	095-10200	Washer (AN960-416L)	6	6	6	6	6	6	6	6	6	6	6	6	2
12	095-10400	Washer (AN960-416)											4	4	4
13	081-00100	Seat-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1	1
14	079-00300	Screw-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1	1
15	183-00100	Cap-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1	1
16	104-00300	Fitting (AN816-4D)					1	1						1	1
	104-00500	Fitting (MS20823-4D)	1	1		1			1		1	1			
17	103-11800	Bolt	4	4	4	4			4	4	4	4	4	4	4
	103-12400	Bolt (AN4H21A)					4	4							
	075-00500	Torque Plate Assy.													1
18	075-01500	Torque Plate Assy.							1	1	1	1			
	075-03300	Torque Plate Assy.	1												
	075-03301	Torque Plate Assy.		1		1									
	075-03900	Torque Plate Assy.											1		
	075-12600	Torque Plate Assy.			1										
	075-13000	Torque Plate Assy.												1	
	(2)	Torque Plate Assy.					1								
19	145-01000	Bushing							2	2	2	2			

Assy. Number

- A) 30-54
- B) 30-54A
- C) 30-54B
- D) 30-54C
- E) 30-58A (1)
- F) 30-58B (1)
- G) 30-61
- H) 30-61D
- I) 30-61E
- J) 30-61F (1)
- K) 30-65
- L) 30-65A
- M) 30-65E

NOTES:


- (1) Inactive assembly – spares support only for parts listed.
- (2) Inactive part – no longer available for spares support.

**D-30118-3, D-30118-4, D-30118-5, D-30118-6, D-30118-7, D-30118-8,
D-30118-9, D-30118-10, D-30793-3, D-30793-4, D-30793-5, D-30793-6**

Organic Lining

Assy. Number

- A) D-30118-3 (3) (4)
- B) D-30118-4 (3) (4)
- C) D-30118-5 (3) (5)
- D) D-30118-6 (3) (5)
- E) D-30118-7 (3)
- F) D-30118-8 (3)
- G) D-30118-9
- H) D-30118-10
- I) D-30793-3 (3) (6)
- J) D-30793-4 (3) (6)
- K) D-30793-5 (3)
- L) D-30793-6 (3)

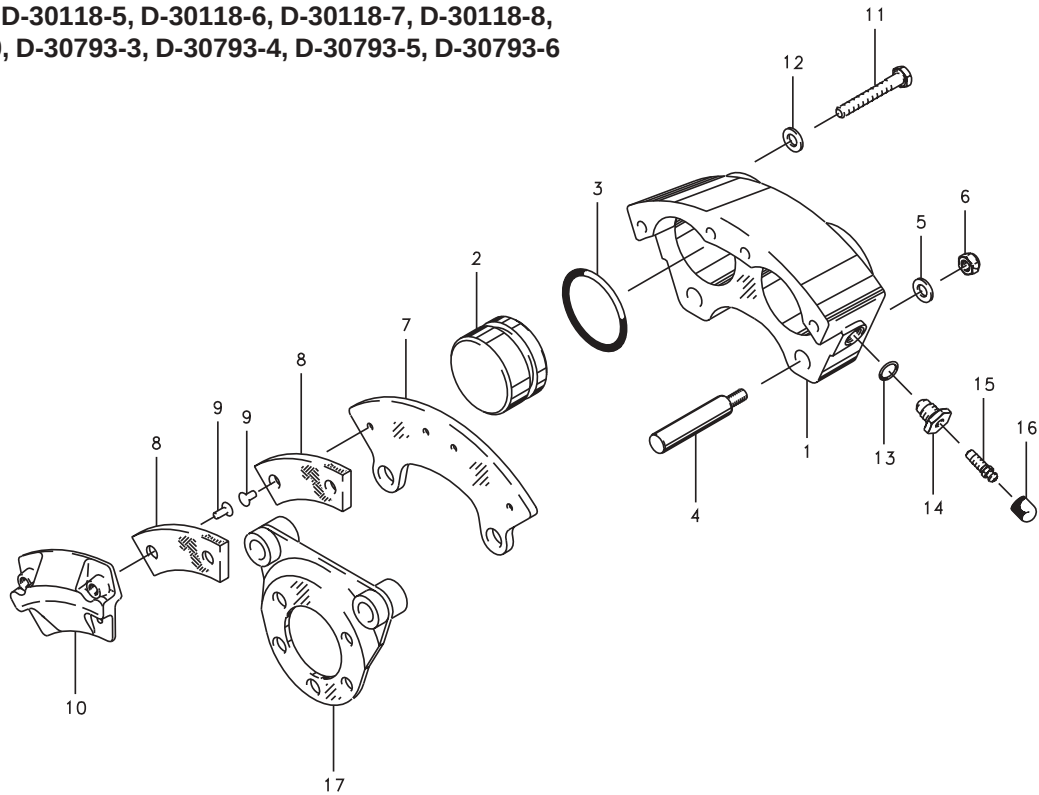


NOTES:

- (1) Cylinder sub-assembly includes anchor bolts, nuts and washers to attach.
- (2) All brake assemblies listed were formerly manufactured by "McCauley Industrial Corporation".
- (3) Inactive assembly – spares support only for parts listed.
- (4) Superseded by 30-52U per Cessna Service Bulletin SEB00-5. Also superseded by conversion kit. See Conversion Kit Directory for applicable Aircraft model.
- (5) Superseded equipment – refer to Cessna Service Bulletin SEB00-5 and Cessna Service Kit SK182-120 for replacement wheels and brakes.
- (6) Superseded by 30-241.
- (7) Inactive part – no longer available for spares support.

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.											
			A	B	C	D	E	F	G	H	I	J	K	L
	091-30118	Cylinder Assembly	1	1	1	1	1	1	1	1				
	091-30793	Cylinder Assembly									1	1	1	1
	(7)	Cylinder Sub-Assembly (1)	1	1	1	1	1	1	1	1	1	1	1	1
1	(7)	Cylinder	1	1	1	1	1	1	1	1	1	1	1	1
2	062-30161	Piston	2	2	2	2	2	2	2	2	2	2	2	2
3	101-02700	O-Ring (MS28775-222)	2	2	2	2	2	2	2	2	2	2	2	2
4	069-30644	Anchor Bolt	2	2	2	2	2	2	2	2	2	2	2	2
5	095-10200	Washer (AN960-416L)	2	2	2	2	2	2	2	2	2	2	2	2
6	094-15200	Nut	2	2	2	2	2	2	2	2	2	2	2	2
	073-30113	Pressure Plate Assy.	1	1	1	1	1	1	1	1	1	1	1	1
7	063-30112	Plate-Pressure	1	1	1	1	1	1	1	1	1	1	1	1
8	066-30026	Lining	2	2	2	2	2	2	2	2	2	2	2	2
9	105-00200	Rivet	4	4	4	4	4	4	4	4	4	4	4	4
	074-30027	Back Plate Assy.	2	2	2	2	2	2	2	2	2	2	2	2
10	064-30028	Plate-Back	2	2	2	2	2	2	2	2	2	2	2	2
8	066-30026	Lining	2	2	2	2	2	2	2	2	2	2	2	2
9	105-00200	Rivet	4	4	4	4	4	4	4	4	4	4	4	4
11	103-14300	Bolt	4	4	4	4	4	4	4	4	4	4	4	4
12	095-10400	Washer (AN960-416)	4	4	4	4	4	4	4	4	4	4	4	4
13	101-00600	O-Ring (MS28775-011)	1	1	1	1	1	1	1	1	1	1	1	1
14	081-30169	Seat-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1
15	079-00300	Screw-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1
16	183-00100	Cap-Bleeder	1	1	1	1	1	1	1	1	1	1	1	1
17	075-30107-1	Torque Plate Assy.	1								1			
	075-30107-2	Torque Plate Assy.		1								1		
	075-30107-3	Torque Plate Assy.							1					
	075-30107-4	Torque Plate Assy.								1				
	075-30278-1	Torque Plate Assy.			1		1						1	
	075-30278-2	Torque Plate Assy.				1		1						1

30-23, 30-23A, 30-23B, 30-23C, 30-23D

Metallic Lining

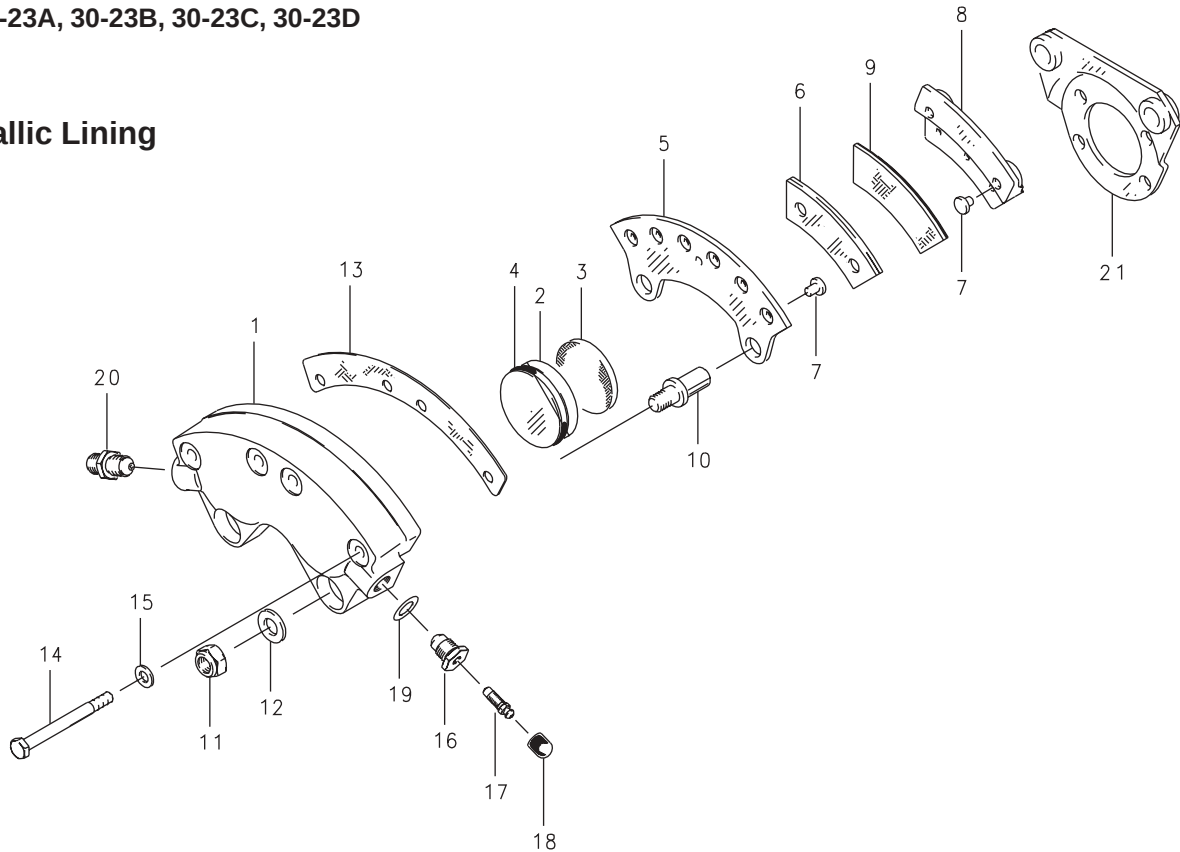

Assy. Number

- A) 30-23 (3) (4)
- B) 30-23A (1) (2) (4)
- C) 30-23B (4)
- D) 30-23C (4)
- E) 30-23D (4)


NOTES:

- (1) Inactive assembly – spares support only for parts listed.
- (2) 30-23C supersedes 30-23A.
- (3) 30-23: 061-06500 Cylinder supersedes 061-01000 Cylinder & 068-01200 Shim.
- (4) Torque plate, Item 21, supplied by airframe manufacturer.
- (5) Inactive part – no longer available for spares support.

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.				
			A	B	C	D	E
	091-01300	Cylinder Assy.	1				
	091-08600	Cylinder Assy.				1	
	091-19100	Cylinder Assy.					1
1	061-06500	Cylinder	1		1	1	1
	(5)	Cylinder		1			
	092-00800	Piston Assy.	2	2	2	2	2
2	062-00700	Piston	2	2	2	2	2
3	088-00100	Insulator	2	2	2	2	2
4	101-02700	O-Ring (MS28775-222)	2	2	2	2	2
	073-03800	Pressure Plate Assy.	1	1	1	1	1
5	063-00600	Pressure Plate	1	1	1	1	1
6	066-06500	Lining	2	2	2	2	2
7	177-00300	Pin	4	4	4	4	4
	074-02300	Back Plate Assy.	2	2	2	2	2
8	064-00500	Back Plate	2	2	2	2	2
9	066-06200	Lining	2	2	2	2	2
7	177-00300	Pin	4	4	4	4	4
10	069-00200	Anchor Bolt	2	2	2	2	
	069-02600	Anchor Bolt					2
11	094-10100	Nut (MS21042-6)	2	2	2	2	2
12	095-10100	Washer (AN960-616L)	2	2	2	2	2
13	068-01100	Shim-Insulator	1	1	1	1	1
14	103-12200	Bolt (AN4H16A)	4	4	4	4	4
15	095-10200	Washer (AN960-416L)	4	4	4	4	4
16	081-00200	Seat-Bleeder	1	1	1	1	1
17	079-00300	Screw-Bleeder	1	1	1	1	1
18	0183-00100	Cap-Bleeder	1	1	1	1	1
19	101-00700	O-Ring (MS28775-012)	2	2	2	2	2
20	104-00200	Fitting (AN815-4D)	1		1		
	104-02200	Fitting (AN919-2D)		1		1	1

30-61A, 30-61B, 30-83, 30-83A

Metallic Lining

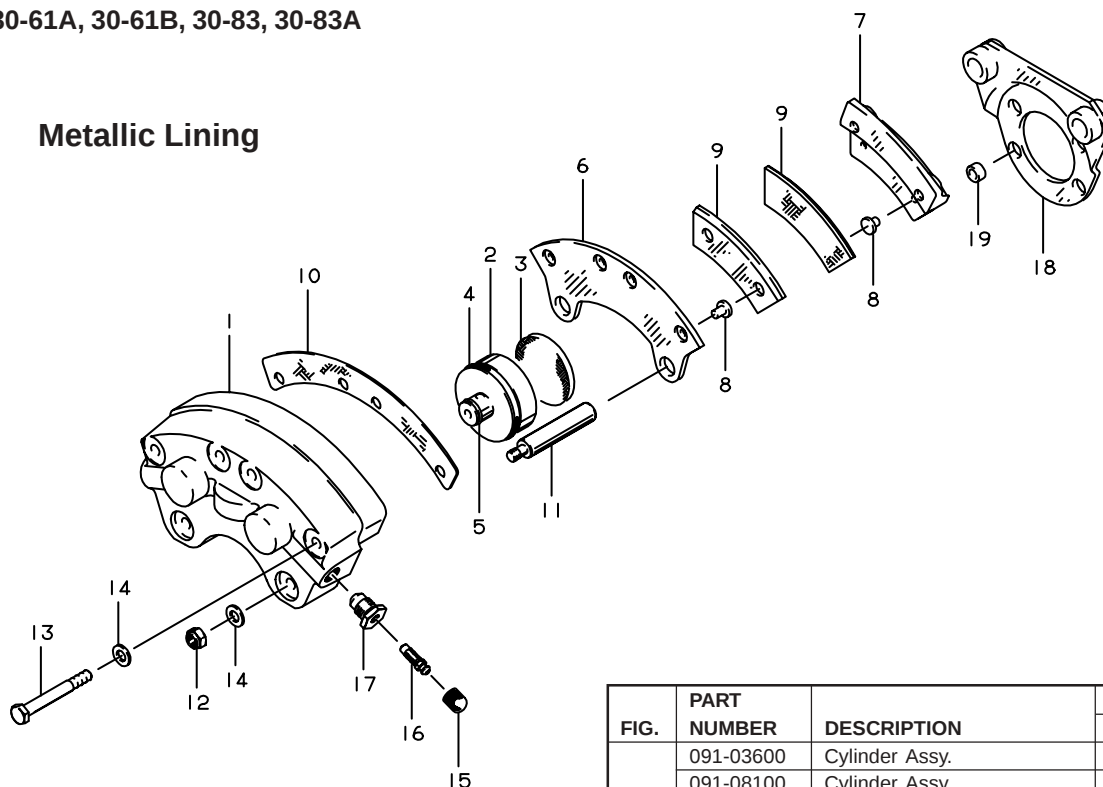

Assy. Number

- A) 30-61A (1)
- B) 30-61B (2)
- C) 30-83
- D) 30-83A


NOTES:

- (1) Inactive assembly – spares support only for parts listed.
- (2) This brake is not FAA-TSO approved – order from airframe manufacturer only.

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.			
			A	B	C	D
1	091-03600	Cylinder Assy.	1	1		
	091-08100	Cylinder Assy.			1	
	091-12900	Cylinder Assy.				1
	061-01800	Cylinder	1	1		
	061-02500	Cylinder			1	
	061-10000	Cylinder				1
	092-01800	Piston Assy.	2		2	2
	092-02000	Piston Assy.		2		
2	062-01700	Piston	2		2	2
	062-01800	Piston		2		
3	088-00100	Insulator	2	2	2	2
4	101-02700	O-Ring (MS28775-222)	2	2	2	2
5	082-02000	Spring-Friction		2		
	073-01600	Pressure Plate Assy.	1	1		
	073-02700	Pressure Plate Assy.			1	1
6	063-01100	Pressure Plate	1	1	1	1
	074-01400	Back Plate Assy.	2	2		
	074-03000	Back Plate Assy.			2	2
7	064-01500	Back Plate	1	1	1	1
8	177-00300	Pin-Lining	8	8	8	8
9	066-03600	Lining	4	4		
	066-06200	Lining			4	4
10	068-01100	Shim-Insulator	1	1	1	1
11	069-00400	Anchor Bolt	2	2	2	2
12	094-10300	Nut (MS21044-N4)	2	2	2	2
13	103-11700	Bolt			4	4
	103-11800	Bolt	4			
	103-12400	Bolt (AN4H21A)		4		
14	095-10200	Washer (AN960-416L)	6		6	6
	095-10400	Washer (AN960-416)		6		
15	183-00100	Cap-Bleeder	1	1	1	1
16	079-00300	Screw-Bleeder	1	1	1	1
17	081-00100	Seat-Bleeder	1	1	1	1
18	075-01500	Torque Plate Assy.	1	1		
	075-03900	Torque Plate Assy.			1	1
19	145-01000	Bushing-T.P.	2	2		

30-127, 30-127A, 30-127C, 30-127D

Metallic Lining

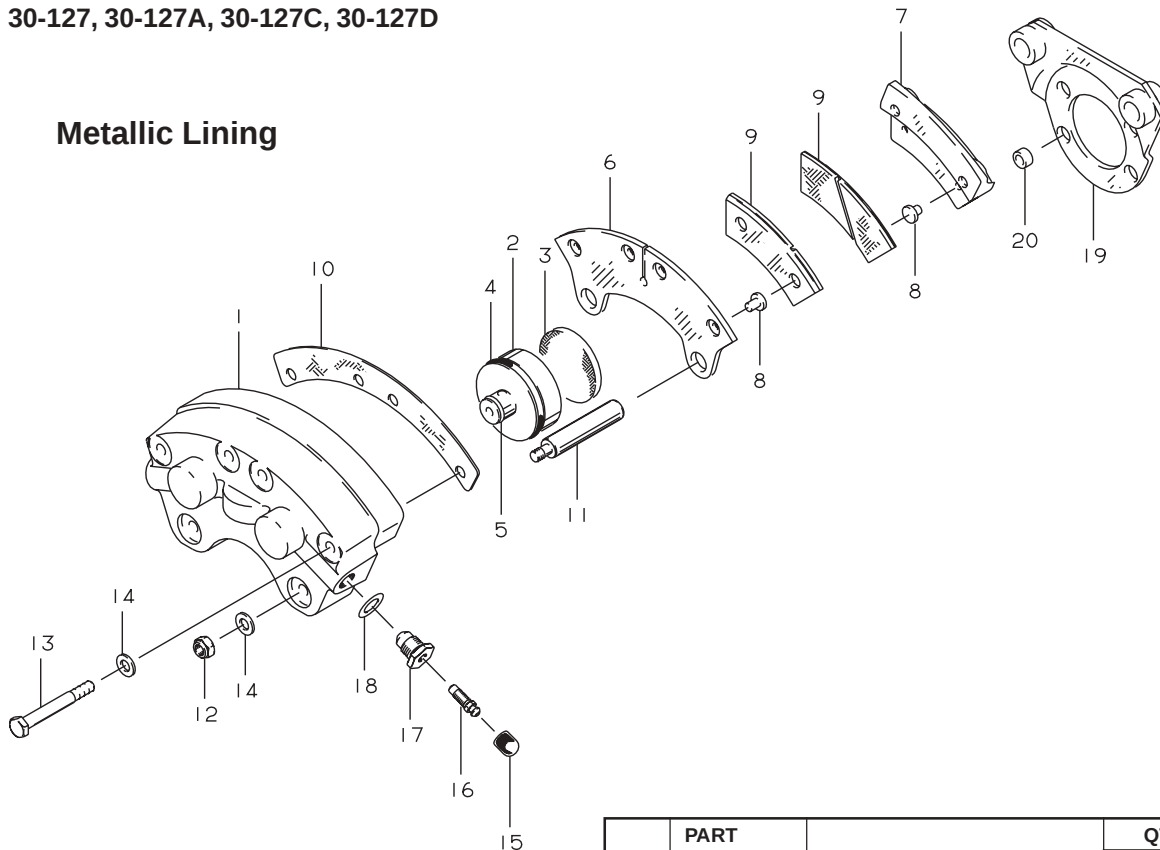

Assy. Number

- A) 30-127
- B) 30-127A
- C) 30-127C (1) (2)
- D) 30-127D


NOTES:

- (1) Uses 075-13800 Torque Plate Assy. for left hand brake and 075-13850 for right hand brake.
- (2) When reordering, specify LH or RH.

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.			
			A	B	C	D
	091-11500	Cylinder Assy.	1			
	091-12700	Cylinder Assy.		1	1	1
1	061-01802	Cylinder				
	061-08500	Cylinder		1	1	1
	061-09100	Cylinder	1			
	092-02000	Piston Assy.	2	2	2	2
2	062-01800	Piston	2	2	2	2
3	088-00100	Insulator	2	2	2	2
4	101-02700	O-Ring (MS28775-222)	2	2	2	2
5	082-02000	Spring-Friction	2	2	2	2
	073-05800	Pressure Plate Assy	1	1	1	1
6	063-04500	Pressure Plate	1	1	1	1
	074-03000	Back Plate Assy.	2	2	2	2
7	064-01500	Back Plate	2	2	2	2
8	177-00300	Pin-Lining	8	8	8	8
9	066-06200	Lining	4	4	4	4
10	068-01100	Shim-Insulator	1	1	1	1
11	069-00400	Anchor Bolt	2	2	2	1
12	094-10300	Nut (MS21044-N4)	2	2	2	2
13	103-11800	Bolt	4	4	4	4
14	095-10400	Washer (AN960-416)	6	6	6	6
15	183-00100	Cap-Bleeder	1	1	1	1
16	079-00300	Screw-Bleeder	1	1	1	1
17	081-00100	Seat-Bleeder	1			
	081-00500	Seat-Bleeder		1	1	1
18	101-00600	O-Ring (MS28775-011)		1	1	1
19	075-20200	Torque Plate Assy.				1
	075-14300	Torque Plate Assy.		1		
	075-14500	Torque Plate Assy.	1			
20	145-01000	Bushing-T.P.	2			

30-129, 30-233, 30-233A

Metallic Lining

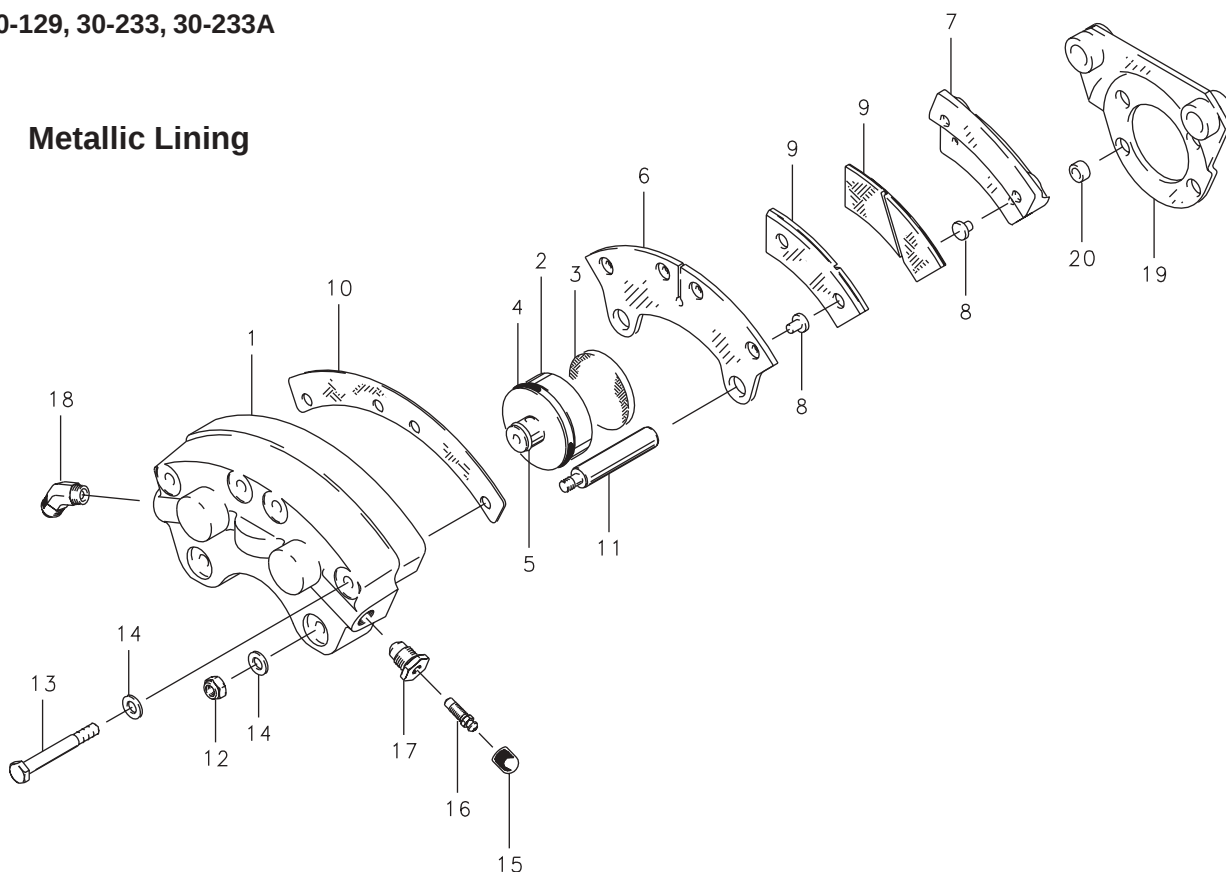


Assy. Number

- A) 30-129
- B) 30-233
- C) 30-233A

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.		
			A	B	C
	091-12300	Cylinder Assy.	1		
	091-21200	Cylinder Assy.		1	
	091-21201	Cylinder Assy.			1
1	061-01802	Cylinder	1	1	1
	092-02000	Piston Assy.	2	2	2
2	062-01800	Piston	2	2	2
3	088-00100	Insulator	2	2	2
4	101-02700	O-Ring (MS28775-222)	2	2	2
5	082-02000	Spring-Friction	2	2	2
	073-02700	Pressure Plate Assy.	1	1	1
6	063-01100	Pressure Plate	1	1	1
	074-03000	Back Plate Assy.	2	2	2
7	064-01500	Back Plate	2	2	2
8	177-00300	Pin-Lining	8	8	8
9	066-06200	Lining	4	4	4
10	068-01100	Shim-Insulator	1	1	1
11	069-00400	Anchor Bolt	2		
	069-01900	Anchor Bolt		2	
	069-02500	Anchor Bolt			2
12	094-10300	Nut (MS21044-N4)	2	2	2
13	103-11800	Bolt	4	4	4
14	095-10400	Washer (AN960-416)	6	6	6
15	183-00100	Cap-Bleeder	1	1	1
16	079-00300	Screw-Bleeder	1	1	1
17	081-00100	Seat-Bleeder	1	1	1
18	104-00500	Inlet Fitting (MS20823-4D)		1	1
19	075-01500	Torque Plate Assy.		1	
	075-05402	Torque Plate Assy.	1		
	075-20400	Torque Plate Assy.			1
20	145-01000	Bushing-T.P.		2	

30-241

Organic Lining

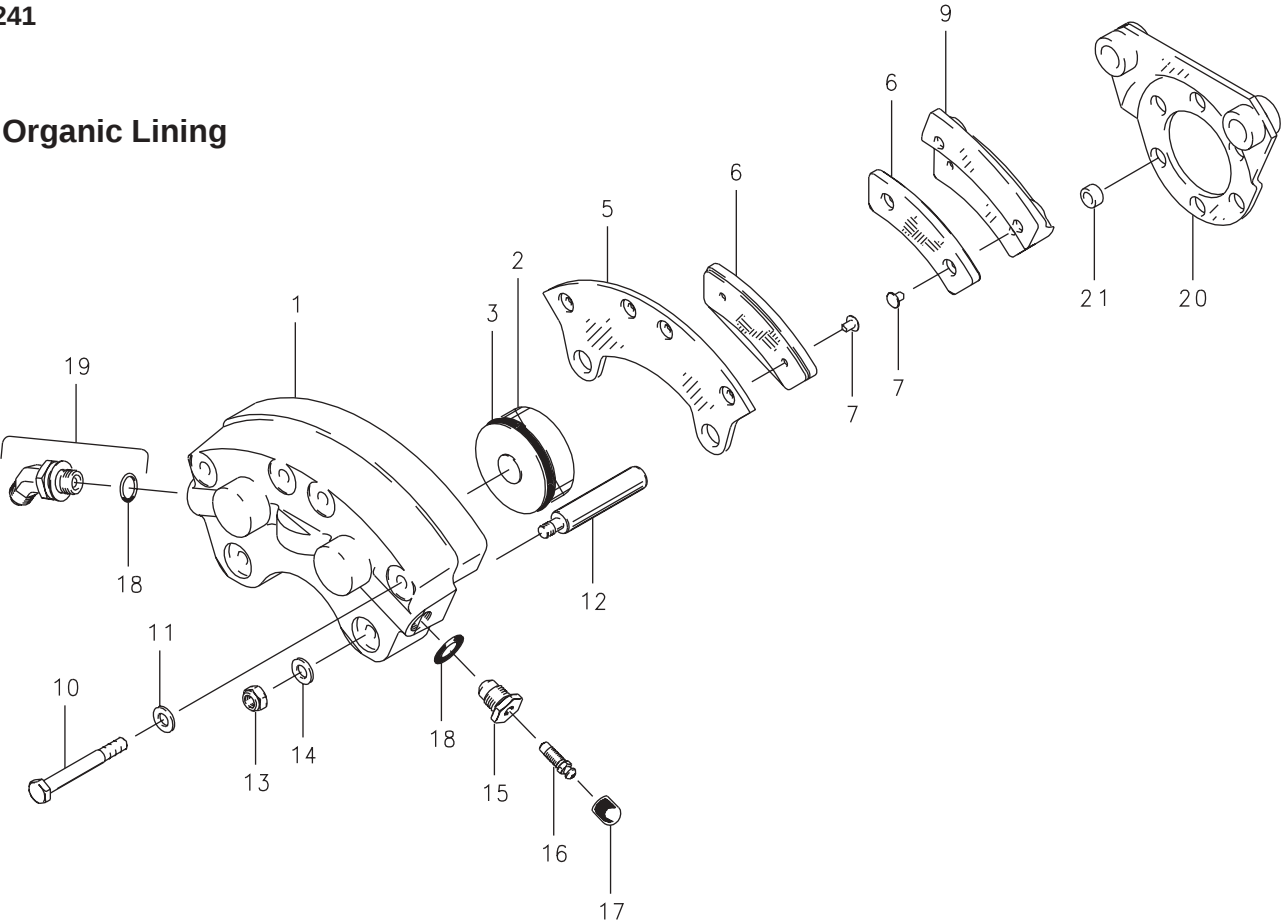

Assy. Number

A) 30-241 (1)

NOTES:

(1) High corrosion resistant,
amphibious equipment

FIG.	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
			A
	091-21600	Cylinder Assy.	1
1	061-16600	Cylinder	1
2	062-10700	Piston	2
3	101-02700	O-Ring (MS28775-222)	2
4	073-04200	Pressure Plate Assy.	1
5	063-01100	Pressure Plate	1
6	066-10500	Lining	2
7	105-00200	Rivet	4
8	074-02900	Back Plate Assy.	2
9	064-01500	Back Plate	2
6	066-10500	Lining	2
7	105-00200	Rivet	4
10	103-85500	Bolt (MS21250H04026)	4
11	095-14300	Washer (MS20002C4)	4
12	069-03100	Anchor Bolt	2
13	094-10300	Nut (MS21044-N4)	2
14	095-10400	Washer (AN960-416)	2
15	081-00200	Seat-Bleeder	1
16	079-00300	Screw-Bleeder	1
17	183-00100	Cap-Bleeder	1
18	101-00700	O-Ring (MS28775-012)	2
19	104-04700	Fitting	1
20	075-20700	Torque Plate Assy.	1
21	145-01000	Bushing	2