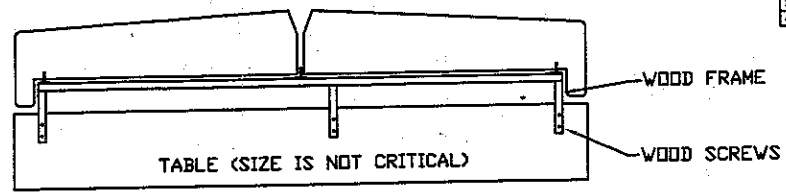

CAUTION: MAKE SURE THE TABLE IS WEIGHTED

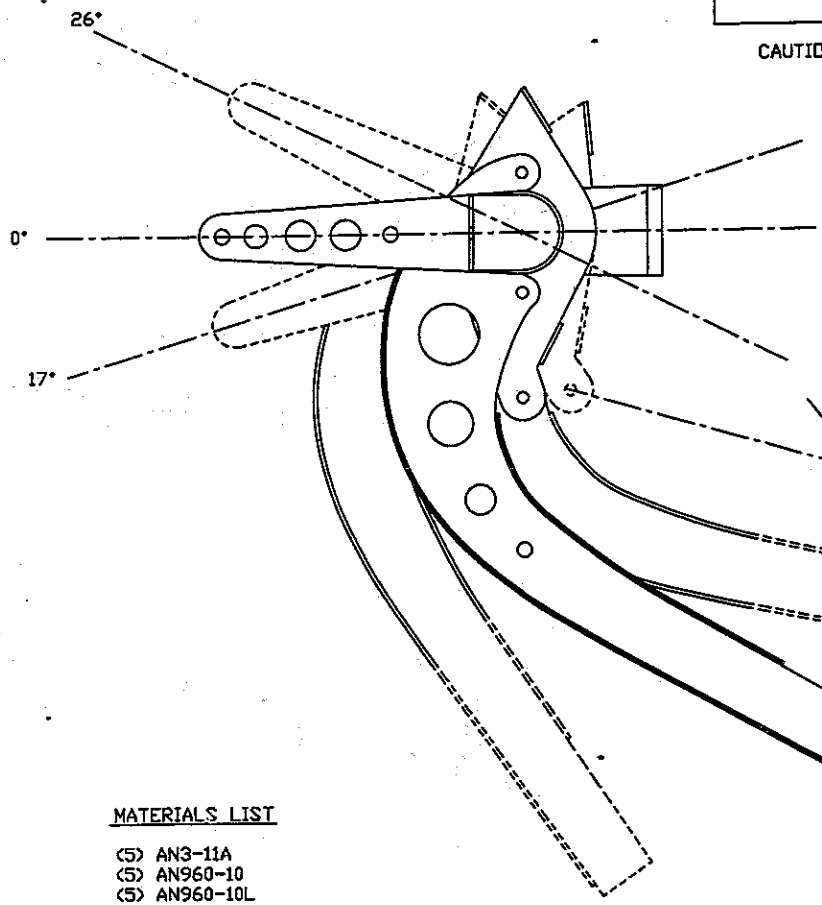

TEST FOR BALANCE AFTER THE PRIMER AND PAINT HAS BEEN APPLIED. MODIFY THE EXISTING T-BAR TO COUNTER BALANCE BOTH YOUR ELEVATORS AT THE SAME TIME.

SUGGESTIONS:
1. FIRST TRY CUTTING THE BOTTOM OFF. THIS SHOULD BE SUFFICIENT. USE A COARSE BLADE ON A BAND SAW TO DO THIS.
2. CUT A LITTLE OVERSIZE AND SAND OR FILE TO FIT.

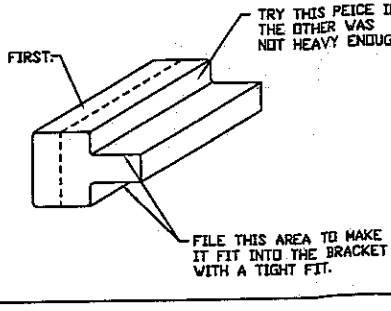

NOTE: MAINTAIN A MINIMUM OF 1/4" CLEARANCE BETWEEN THE TUBE AND THE LEAD WEIGHT.

MAXIMUM WEIGHT ALLOWED:
2 POUNDS

DRILL AND INSTALL:
(2) AN3-11A BOLTS
(2) AN960-10L WASHERS
(2) AN960-10 WASHERS
(2) AN365-1032A NUTS

MATERIALS LIST

(5) AN3-11A
(5) AN960-10
(5) AN960-10L
(5) AN365-1032A
(1) WTLD-T
(1) 9-401901 COUNTER BALANCE ELEVATOR WELDMENT

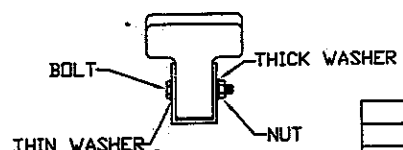

SUB NO.	SH	REV

REVISIONS

ZONE	REV	DESCRIPTION	DATE	APPROVED
A4	A	REVISED PART NUMBER	4-8-99	A.S.

PARTS LIST

QTY REQD	CAGE CODE	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION	MATERIAL SPECIFICATION	ITEM NO.

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS ± 1/32 DECIMALS .XX ± .03 .XXX ± .005 ANGLES ±1/2°

MATERIAL

FINISH

NEXT ASSY | USED ON

APPLICATION

DO NOT SCALE DRAWING

CONTRACT NO.

APPROVALS	DATE
DRAWN LUKE	10/08/96
CHECKED	
ENGRD	

LANCAIR

COUNTER WT. ASSEMBLY

SIZE D | CAGE CODE | DWG NO. 9-111901A | REV A

SCALE 1/1 | SHEET